



- | | | |
|-----------------------|-------------------------|-------------------------|
| 1 Starting ring | 7 Gearbox driving shaft | 13 Front casing |
| 2 Joint | 8 Runner hub insert | 14 Engine crankshaft |
| 3 Flywheel plug | 9 Runner hub | 15 Front bearing centre |
| 4 Bearing housing | 10 Rear casing | 16 Runner pilot bearing |
| 5 Oil seal housing | 11 Runner | 17 Grubscrews |
| 6 Rear casing bearing | 12 Balancing plug | |

Fig 19 Fluid flywheel

