



T 5029/84

- |                            |   |
|----------------------------|---|
| 1 Rectifier                | 9 0.1 $\mu$ F capacitor                         |
| 2 Main fuse                | 10 Generator connection socket                  |
| 3 Microswitch              | 11 Current limitation trimmer resistor          |
| 4 Current unit             | 12 Radio battery connection plug                |
| 5 Carbon pile regulator    | 13 Vehicle battery and ignition connection plug |
| 6 Voltage unit             | 14 Battery thermal switch connection socket     |
| 7 Cut-out                  | 15 Relay  |
| 8 Voltage ballast resistor | 16 Warning lamp fuse                            |

Fig 13 Generator panel No.2, Mk 2/1, Wiring diagram