

## Crew Box 2 Set

0334. **The Crew Box 2 Set (CB 2)** is the general purpose selection and control box. It enables the user to select and operate one of the 2 installed CLANSMAN radios and monitor the other and have intercommunication and O/R facilities.


Switch position		Facility
Working	Monitor	
A <sub>B</sub>	OFF	Work 'A' set; press to talk; signal in both ears.
A <sub>B</sub>	ON	Work 'A' set; press to talk; signal in left ear. Monitor 'B' set; signal in right ear.
B <sub>A</sub>	OFF	Work 'B' set; press to talk; signal in both ears.
B <sub>A</sub>	ON	Work 'B' set; press to talk; signal in left ear. Monitor 'A' set; signal in right ear.
I <sub>A</sub>	OFF	Intercomm; press to talk; signal in both ears.
I <sub>A</sub>	ON	Intercomm; press to talk; signal in left ear. Monitor 'A' set; signal in right ear.
O/R (Override, spring loaded)	—	Voice call without use of pressel; heard by all crew members. Revert to I <sub>A</sub> for subsequent communication. An O/R call from any other control box in the harness replaces the signal in the CB-2 operator's right ear, irrespective of any switch settings. The loudness of the O/R call will depend on the MONITOR - VOL setting.
A <sub>B</sub> or B <sub>A</sub>	LIVE IC	Microphone live - talk on IC; monitor IC in right ear.
A <sub>B</sub> or B <sub>A</sub>	+	Microphone live - talk on IC; monitor 'B' or 'A' set and IC in right ear. Press to transmit on selected 'A' or 'B' set; signal in left ear.

WORKING SWITCH AND VOLUME CONTROL

MONITOR SWITCH AND VOLUME CONTROL

SOCKET 12-pt CABLE ASSEMBLY TO HARNESS

SOCKET 12-pt CABLE ASSEMBLY TO HARNESS

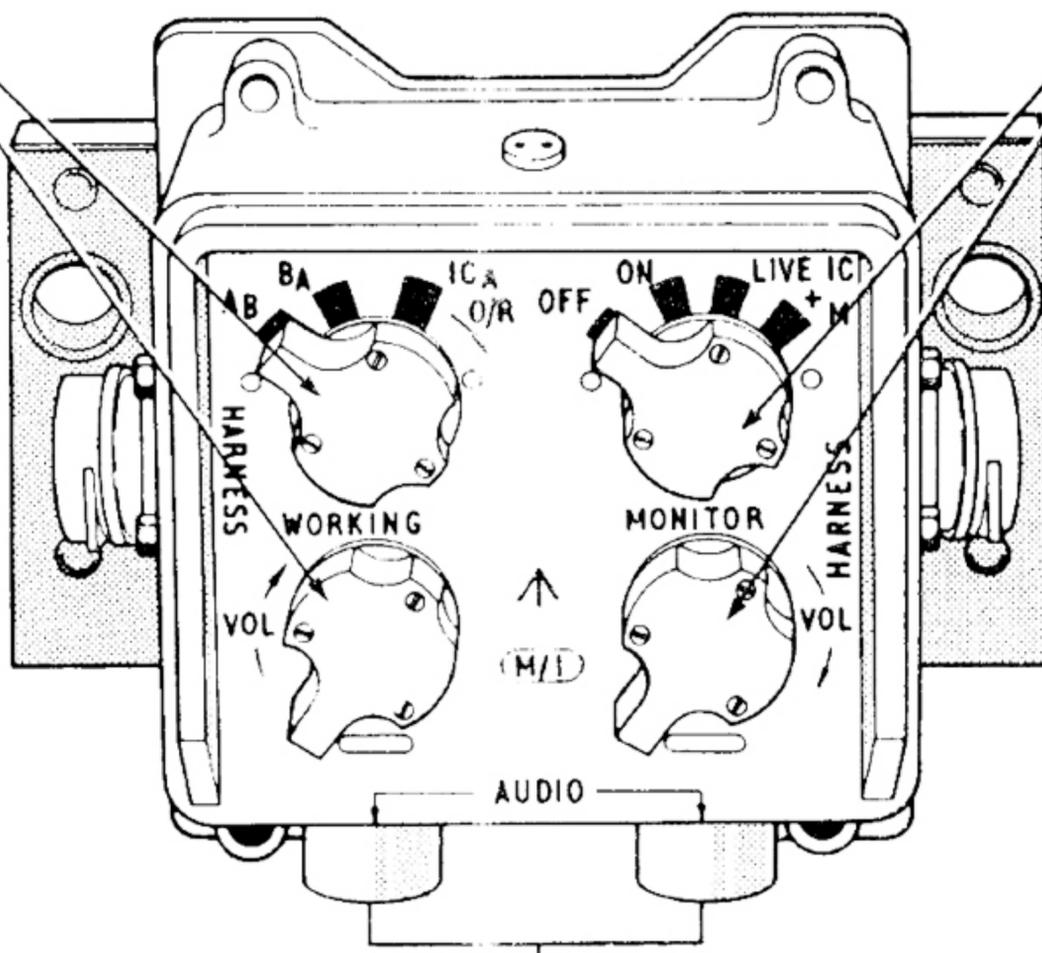

7-pt SOCKETS TO HEADGEAR